

Model 400 System Concept

Note: Pacific Seismic Products, Inc. supplies the Model 400 only; other components depicted here can be sourced separately.

MODEL 400 SEISMIC ACTUATED VALVE (80 psi max operating pressure)










PNEUMATIC-SPRING TYPE VALVE ACTUATOR



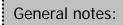


- 1) Mount the Model 400 to a rigid frame or building wall.
- 2) The Model 400 must be installed level for best operational stability.
- 3) The Model 400 can be connected to an Actuator to provide:


-Spring Fail to Close



Port flow condition when RED indicator flag shows in viewport window:

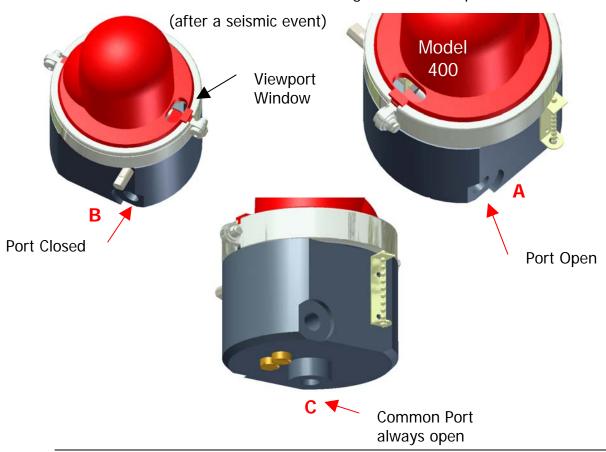


Port flow condition when GREEN indicator flag shows in viewport window:

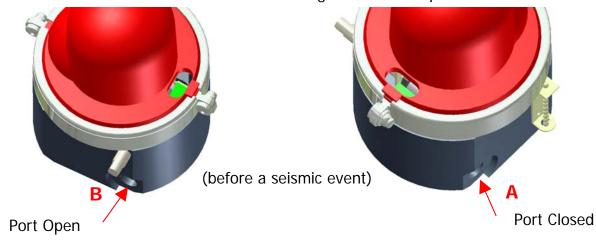

This is a 2-Position, 3-Way valve with spring action "armed" when the view window indicates "green."


The all-mechanical seismic sensor located in the red color dome area operates according to ASCE 25-97.

Reset must be done manually.

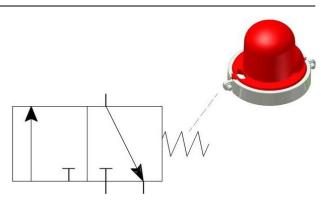



Model 400 Seismic Actuated Valve Mounting Detail

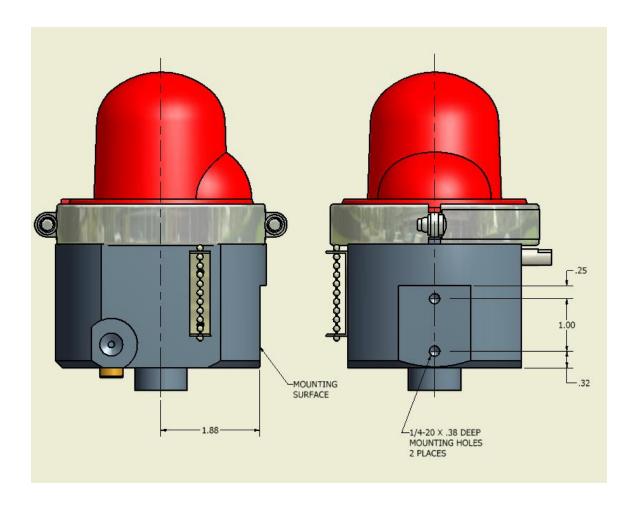

Mounting notes:

- Mount level with gravity as indicated by chain level site
- Mount rigidly so that the valve will shake as much like the earth or building foundation as possible